

# **Electronic Kitchen Scale**


**Instruction**  
**NC-303**

# Electronic Kitchen Scale Instruction

## Dear Customer

Before using the appliance, the user should read the following instructions carefully.

## Specification

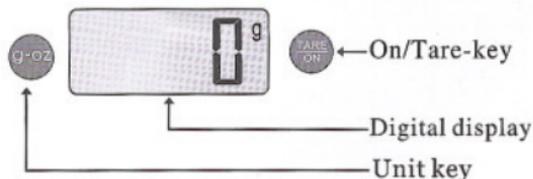


CAPACITY(Max.)	DIVISION(d)
5kg	1g

## Important hints

- Do not clean the scales with water and do not immerse them in water.
- If this capacity is exceeded, the symbol 'EEEE' appears in the display.
- These scales are designed for household use and are not suitable for medical or commercial applications; they are not officially calibrated.
- Before the scales are used for the first time, the protective strip in the battery compartment must be removed.

## Batteries

- Insert or replace the battery, open the battery compartment located underneath the unit. When inserting the battery, always observe the correct polarity. The symbol (+) must face upwards. Use one 3V lithium battery type CR2032.
- The symbol  appears if the battery needs replacing.
- Auto switch-off occurs if display shows "LO".
- During extended periods of non-use, always remove the battery from the battery compartment.

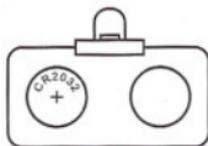

## Operation

- Put the scales on a firm and level surface.

- Weigh recipe ingredients, place a suitable bowl or container on the Platform. Solid ingredients may be put directly onto the scales.
  - Press and release  button, Wait until display shows "0".
- Press the appropriate key  to convert between grams( gm) and ounces ( oz)



To allow for any additional weight, always make sure to position any accessories (bowl etc.) on the platform before the unit is switched on.

- Add the ingredients to the bowl (or other accessory) used, until the desired weight is displayed.
- To add more ingredients without first emptying the container, the Tare key may be pressed again. In this way, only the additional weight is displayed.
- After using, the scales may be switched off by holding down the  key. However, the unit will switch off automatically if no key is pressed within a 60-second period.

## Cleaning and care

- The housing and Platform may be wiped with a soft dry or slightly damp, lint-free cloth.
- Do not use any abrasives, harsh cleaning solutions or aggressive solvents for cleaning.

## Disposal



Do not dispose of old or defetive appliances in domestic garbage; this should only be done through public collection points.