

# NARITA®



Juice Extractor

NE - 900


INSTRUCTION MANUAL

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the followings :

1. Read all instructions before using.
2. To protect against the risk of electrical shock do not put (main housing, bottom and motor assembly, power supply) in water or any other liquid.
3. Close supervision is necessary when the appliance is used by or near children. Do not allow children to use this appliance.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid touching any moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner.  
Return the appliance to the nearest authorized service facility for examination, repair, electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoor. (Household Use Only.)
9. Do not let cord hang over the edge of table or counter.
10. Blades are sharp. Handle them carefully.
11. Do not modify the plug in any way. If your AC wall outlet becomes loose, it may get overheat. Should this happen, consult a qualified technician.
12. Do not attempt to defeat the cover interlock mechanism.
13. The appliance is designed for extracting fruit or vegetables only. Do not use for blending, chopping, mincing, pureeing, slicing or shredding of any meat, nut, fruit or vegetable.
14. Do not push the food into the Feed Chute with your finger. Always use the Food Pusher provided.
15. Blade is sharp. Handle carefully. Do not touch the small cutting blades in the base of the stainless steel filter basket.
16. Always leave the appliance unplugged when not in use or assembling.  
Connect the appliance only to properly wired wall outlet. Do not use extension or multi socket & do not plug it into the same outlet or use it on the same circuit with other appliances. A circuit overload could occur.
17. Always make sure the appliance is properly & completely assembled before operating.
18. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to the users.

**19. SAVE THESE INSTRUCTIONS.**

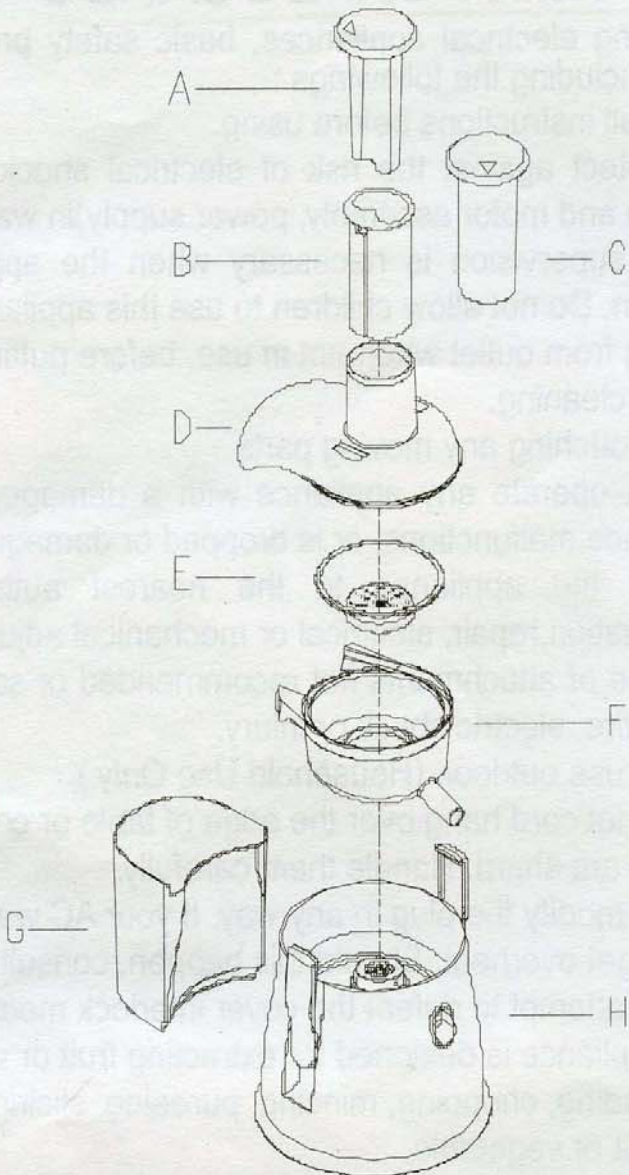

## DESCRIPTION

- |                       |                   |
|-----------------------|-------------------|
| A. Big Plunger        | F. Top Housing    |
| B. & C. Small Plunger | G. Pulp Container |
| D. Top Cover          | H. Body           |
| E. Grater             |                   |

# OPERATING INSTRUCTIONS

1. Unpack and remove all packaging materials from carton.
2. When the appliance is used for the first time, it is normal for the motor to give off a small amount of smoke and odor.
3. Always make sure the appliance is properly & completely assembled before operating.
4. Wash the fruit or vegetables ready for juicing. Most fruit and vegetables such as apples, carrots, sugar cane and cucumbers will not need to be cut to size as they will fit into the feed chute. When juicing carrots, place the tip of the carrot in last.
5. Ensure to place a large jug or glass under the spout while juicing.
6. Plug the power cord into an AC120V power outlet and turn the power to "ON" position to start operating.
7. With the motor running, place food down the feed chute. Using the food pusher, gently guide food down the feed chute.

Note:

- A. To extract the maximum amount of juice, always push the food pusher down slowly.
  - B. Never use hands or foreign objects to push food down the feed chute or to clear the feed chute. Always use the food pusher provided.
8. Juice will flow into the jug / glass and the separated pulp will accumulate in the pulp container.

Note :

- A. Do not allow the pulp container to overfill as this may damage the unit
- B. Please switch off the appliance when empty the pulp container.
- C. For easy cleaning, suggest place a plastic bag into the pulp container to collect pulp.

Note : If the supply cord is damaged, it must be replaced by the manufacturer or its Service agent or a similar qualified person in order to avoid a hazard.

9. Maximum continuity operation time : 30 min
10. Rated value of appliance is 120V, 450W.

# ASSEMBLING INSTRUCTIONS

1. Place filter base on top of the motor base.
2. Push the stainless steel filter basket inside the filter base until it clicks into place. Be sure the filter basket is properly placed when switching the appliance on. Beware of the small cutting blades at the base of filter basket.
3. Place the juicer cover over the filter base, position the feed chute over the stainless steel filter basket and lower into position.
4. Raise the safety locking handle up into the vertical position. Locate the locking handle into the two grooves on both sides of the juicer cover.
5. Slide the food pusher down the feed chute by aligning the groove in the food pusher with the small protrusion on the inside of the top of the feed tube.
6. Place the pulp container into position by tilting the pulp container slightly.

Hint : For easy cleaning, place a small plastic bag into the pulp container to collect the pulp.

The bag may also prevent pulp from spitting out of the pulp Container.

7. Place a jug or glass under the spout on the right hand side of the juice extractor.

## CARE & CLEANING

1. Turn the power switch to "OFF" position and unplug the appliance before cleaning.
2. Disassemble the appliance. Note: Lift off the filter base with the stainless steel filter basket inside. Then, turn the filter base upside down and carefully remove the filter basket.
3. Except the motor base, all detachable parts can be immersed in water or any other liquid.
4. Wash with warm soapy water and sponge or cloth. Do not use harsh abrasives or caustic cleaners. Rinse with water thoroughly & wipe dry with cloth.
5. For the stainless steel filter basket, wash under running water & brush from the inside of the basket out with the nylon cleaning brush provided. Always handle the filter basket with care as it can be easily damaged.
6. Discoloration of the plastic may occur with strongly colored fruits and vegetables. To help prevent this, wash the stained parts immediately after use.
7. Wipe the motor base with a damp sponge or paper towel.
8. All parts of the appliance are not recommended for washing in the dishwasher.
9. A storage place for power cord is underneath the machine.
10. For storage, make sure all the parts are dry completely and store them in a clean & dry place.
11. Do not use the appliance if the rotating sieve is damaged.
12. The appliance is not intended for use by young children or infirm persons without supervision.
13. Young children should be supervised to ensure that they do not play with the appliance.