

**Electric Kettle**

**Model No.: NEK-1700**

**INSTRUCTION MANUAL**

**[www.naritausa.com](http://www.naritausa.com)**


## IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. Do not let the cord hang over edge of table counter or touch hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate without water, otherwise heater element would be damaged.
6. Ensure that kettle is used on a firm and flat surface where the children can't touch.  
This can prevent the kettle from overturning.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water boiling, Avoid to contact with steam from the spout when water is boiling or just after it has switch off. Do not be anxious to uncover the lid.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
10. Be careful when opening the lid for refilling when the kettle is hot.
11. Close supervision is necessary when any appliance is used by or near children.
12. Do not touch the hot surface. Use the handle or the button only.
13. The kettle is for household use only.
14. Do not use outdoors.
15. The use of accessory attachments, that are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
16. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
17. Always ensure the lid is closed and do not lift it while the water is boiling.
18. Scalding may occur if the lid is removed during the brewing cycles.

19. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
20. Do not use the appliance for other than intended use.
21. The kettle can only use with the stand provided.
22. If the kettle is overfilled, boiling water may be ejected.
23. Save these instructions.

### Only household use

### Description

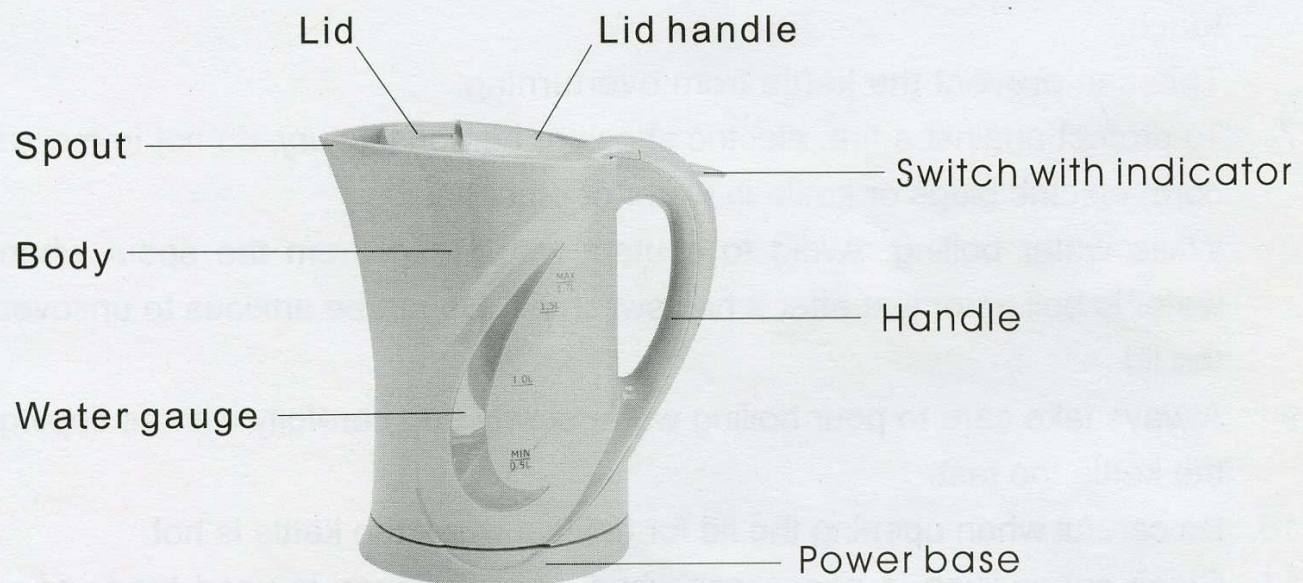

### Before using your kettle

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

**NOTE:** the max capacity of kettle is 1.7L.

## Operation of your kettle

1. To fill the kettle, remove it from the power base and open lid by lifting lid handle, fill with the desired amount of water. Alternatively, the kettle may be filled through the spout. And the water level should not exceed max marks or sit below min max. Too little water will result in the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

2. Position the kettle on the power base.
3. Connect the plug into a power outlet. Press down the switch, the indicator will light up. Then start to boil the water, the kettle will switch off automatically once the water has boiled.

**NOTE:** Ensure that switch is free of obstructions and the lid is firmly closed, The kettle will not turn off if the switch is constrained or if the lid is opening.

4. Lift the kettle from the power base and then pour the water.

**NOTE:** operate carefully when pouring the water from your kettle, as boiling water will scald.

5. The kettle will not re-boil until the switch is pressed down again. The kettle may be stored on the power base when not in use.

## Boil-dry protect

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water before re-boiling.

## Cleaning and maintenance

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow

moisture to contact with these parts.

2. Wipe the appearance of body with a wild and damp cloth or cleaner, never use a poisonous cleaner.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

## **Removal of mineral deposits**

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushes away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.