




## HEATING FAN

**120V 60Hz 1500W**

**MODEL: NH-750**

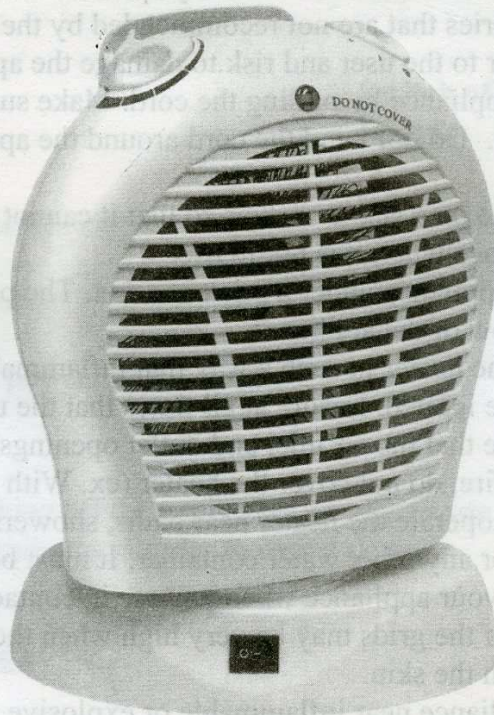

**READ CAREFULLY AND SAVE THESE INSTRUCTIONS**

# INSTRUCTION MANUAL

## IMPORTANT SAFEGUARDS

- Please read these instructions carefully before using the appliance.
- Check that your mains voltage corresponds to that stated on the rating plate of the appliance.
- Keep out of reach of children or incompetent persons.
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage but have it checked and repaired by a competent qualified service<sup>(\*)</sup>. Should the cord be damaged, it must be replaced by a competent qualified service center.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- Never immerse the appliance in water or any other liquid for any reason whatsoever. When cleaning the appliance, refer to the instructions in the paragraph "Cleaning and care" because the water penetration through the openings can be very dangerous for your appliance.
- Never use the appliance near hot surfaces.
- Before cleaning and when you do not use the appliance, always unplug the appliance from the power supply. Do not attempt to remove the plug from the wall socket with wet hands.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- Stand the appliance on a stable surface so that it cannot fall.
- Unplug the appliance when it is not in use.
- Do not place the appliance under a power socket. The power socket must not be in the hot airflow of the appliance.
- Always position the heater in such a way that inflammable materials (such as curtains) cannot be ignited. Ensure at all times that the unit is placed solidly on its base. Make sure that the air inlet and outlet openings are not blocked. To avoid any risk of fire, do not cover the heater (ex. With clothes).
- Warning:** Do not operate the heater near baths, showers, washbasins, swimming pools or any other water container. It must be impossible to reach the commands of your appliance when you are in contact with water.
- The temperature of the grids may be very high when the appliance is in use. Avoid contact with the skin.
- Never use the appliance near inflammable or explosive materials.
- Do not insert any objects through the grille or into the interior of the appliance.

## POSITIONING OF THE APPLIANCE

The heater should only be operated at a minimum distance of 50cm from any wall or other object that could disturb its operation. Position the air flow in order to optimise the heating of the room. Avoid corners, small volumes, floors and ceilings.

## OPERATION

When the appliance is switched on for the first time, a slight smell may be emitted. Please ensure sufficient ventilation. This smell will disappear very quickly.


Place the power selector in "0" position, the thermostat on its minimum position and put the plug in a 120V power socket.

The selector allows you to choose the desired power. The higher the power is set, the faster the heating is put out.


The thermostat regulates the temperature in the room. A red pilot light will indicate that the appliance is operating.

In order to spread the heat and to optimise the heating of the rooms, your appliance is equipped with an oscillation feature of +/- 30° that can simply be activated by pressing the switch situated on the base. Position I allows the appliance to rotate and position 0 blocks the rotation of the appliance in the desired position.

Note: If the power selector is on position "0", (OFF) the oscillation function will not work.


When the selector is in position  , the appliance operates as a fan, without heat.

### Power selector

- 0 OFF
-  Fan without heater
- I Medium power
- II Maximum power

### Switch of the base (oscillation switch)

- "0" Oscillation off
- "I" Oscillation on

Note: before switching off the appliance, we advise you to operate it in  position for 2 to 3 minutes in order to cool it down.

## SAFETY DEVICES

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 10 minutes for it to cool and remove the object that is obstructing the grids. Then switch it back on as described above. The appliance should operate normally. If the problem persists, please contact the nearest customer service.

Your appliance is also fitted with a safety switch situated underneath the base and which switches off the appliance in case it is raised or tipped over. Therefore, it is absolutely necessary to install the appliance on a flat stable surface. This switch is automatically pressed when the appliance is installed on a flat surface.

## **CLEANING AND CARE**

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the heater with water and do not immerse it. Clean the housing with a damp cloth.
- If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner. This maintenance should be done regularly to assure the good operation of the appliance.

## **LIMITED WARRANTY**

This unit is warranted against defective materials or workmanship for 1 year from the date of purchase. The warranty is valid for any manufacturing defects. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. Narita shall have no responsibility for any damages incidental to defective equipment and its sole responsibility shall be for the repair or replacement as indicated, except for shipping and handling costs. There are no implied or expressed warranties of fitness or merchantability which extend beyond the above warranty.

Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the return authorization number.

This warranty valid only in the United States, excluding Alaska, Hawaii and Puerto Rico.

Website: [www.naritausa.com](http://www.naritausa.com)