

- Dry the kettle before plugging into the mains again. Clean the outside of the kettle and the base with a soft damp cloth, do not use scouring materials.
- Descale the appliance regularly. Use detergent, which can be obtained from specialist shops, and follow the instructions given.
- To store the kettle; wind the cord in the cord compartment on the underside of the base.

**Technology data:**

Voltage: 120V~/60Hz

Wattage: 1500W

Capacity: 1.7L

**LIMITED WARRANTY**

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.

# NARITA®

**INSTRUCTION MANUAL**



**Model No.: GK1501**

**Attention:** Please read these instructions carefully before use in order to avoid damage due to incorrect use. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over.

## **SAFETY GUIDE**

- Incorrect operation and improper use can damage the appliance and cause injury to the user.
  - The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
  - Before plugging in the appliance, check that the current and power match those given on the rating plate.
  - Do not put the appliance or the plug in water or any other liquid. This could cause a fatal electric shock, if the appliance or plug should accidentally become wet, unplug the appliance immediately and have it checked by an electrician before using it again.
  - Do not place any kind of object into the inside of the kettle.
  - Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
  - Do not touch the plug with wet or damp hands.
  - Check the cable and the plug regularly for any possible damage. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid the hazard.
  - Do not use the appliance if it is dropped or otherwise damaged or if the cable or plug are damaged. In the case of damage, take the appliance to an electrical repair shop for examination and repair if necessary.
  - Never attempt to open the appliance or repair the appliance yourself. This could cause an electric shock.
  - Do not allow the cable to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
  - For extra protection it is possible to fit the electric household installation with a fault current breaker with a rated breaking current of not more than 30mA. Ask your electrician for advice.
  - Make sure that there is no danger that the cable or extension cable inadvertently be pulled or cause anyone to trip when in use.
  - If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord or plug may occur.
  - Stand the appliance on a firm, level and heatproof surface away from naked flames (e.g. gas oven) and out of the reach of children.
  - This appliance is neither suitable for commercial use nor for use in the out door.
  - The cordless kettles shall state that the kettle is only to be used with the stand provided.
  - The appliance must not be immersed
  - Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
  - As long as the appliance is connected to the mains socket, a small amount of current continue to flow to the appliance even when it's not in use.
  - Never use the cable to carry the appliance.
- The kettle is overfilled, boiling water may be ejected.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## **SPECIAL SAFETY INFORMATION**

- Use the kettle only with the base supplied, and do not use the base for any other purposes.
- Check the level marks (MAX) when filling. Do not overfill the kettle. If you do so, there is a danger that scalding water could boil over.
  - Take care to close the lid properly before switching on. Otherwise, hot water may overflow.
  - The kettle is for heating water only, and is not to be used for any other liquid.
  - CAUTION! Danger of burns! The kettle becomes very hot during use. So hold it by the handle only.
  - WARNING! Escaping steam! Do not remove the lid while the water is boiling.
  - Allow the water to cool down in a safe place out of the reach of children and disabled people.

## **BEFORE FIRST USE**

- Remove all packaging materials.
- Then boil clean cold water three times. (See OPERATION) pour the water away each time.

## **OPERATION**

- Find out the mains cord only as much as necessary.
  - Open the cover by pressing the cover release button and fill the kettle with the required amount of water. Please observe the water level marks on the outside of the kettle. Do not fill below the "Min" mark and above "Max" mark.
  - Close the lid.
  - Press the switch to switch the kettle on and the indicator light will turn on. (If the indicator light is on, that means the kettle is operating, don't press the switch again.)
  - You can pour the water out without opening the lid.
  - If you want to stop the water boiling or interrupt it briefly, remove the kettle from the base.
  - Note: This appliance comes with a safety device, which automatically switches off the heater element if the appliance is inadvertently switched when empty, or if it boils dry. In this case, let the appliance cool down completely, before filling with water again.
- ## **CLEANING**
- Please also observe the safety advice for this.
  - Always remove the plug from the mains socket before cleaning the base. Let the kettle cool down completely.