

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electric shock, unplug the appliance from the wall outlet before cleaning. Do not use the appliance if the power cord, plug, or main body is wet.
4. Close supervision is required at all times when used by or near by children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or in any manner. Return appliance to the place of purchase for examination, repair, or adjustment.
7. The use of accessories not recommended by the appliance manufacturer may void the warranty.
8. Do not use appliance for purposes not intended by the manufacturer.
9. Do not place on or near a hot gas or oil burner or heated oven.
10. Extreme caution must be used when handling appliance containing hot oil or other liquid.
11. Do not use appliance for purposes not intended by the manufacturer.
12. Do not use appliance for purposes not intended by the manufacturer.
13. The appliance must be grounded.
14. This appliance is not intended for use by persons (including children) with reduced physical, mental, or physical abilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be kept from playing with the appliance.
16. If the supply cord is damaged, it should be replaced by a special cord or assembly available to the manufacturer or its service agent.

NARITA®



RICE COOKER

RC-3

(NRC-150)

INSTRUCTION MANUAL

Save these instruction for future use

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions carefully.
2. Do not touch hot surfaces, use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or main body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near by children.
5. Unplug from outlet when out in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
12. Do not use appliance for other than intended use.
13. The appliance must not be immersed in water.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with The appliance.
16. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.

SAVE THESE INSTRUCTIONS.

- * These units are "household use"
Preheating of the appliance is not necessary.

OPERATING INSTRUCTIONS:

Please read this instructions carefully before using the appliance.

CAUTION:

To reduce the risk of electric shock, cook only in removable container.

CAUTIONS TO READ BEFORE USING RICE COOKER:


1. Only use this product with the correct AC voltage outlet. (Correct rated voltage see box and label at the bottom of rice cooker.)
2. Be sure to unplug AC cord when pan is not in cooker, or when cooker is not being used. Remember the "KEEP WARM" feature operates whenever the cord is plugged in
3. Place the inner pot inside the cooker before operating. Turn the pot gently to right and left.
4. If the switch button is difficult to press to the "cook" position, do not try to force it down. This difficulty usually occurs when inner pot is of fully inserted in cooker or when cooking has just finished.
5. Place the lid on your inner pot while cooking, keep the lid in place after serving to prevent your rice from drying out or discoloring.
6. Keep bottom of inner pot and surface of heater plate free of foreign matter to prevent operating malfunctions.

MAINTENANCE PROCEDURES

1. Remove inner pot and lid and wash them in hot soapy water, taking care to rinse completely, then dry with a soft cloth.
2. Clean outside of cooker with a clean damp cloth. Never clean any part of the cooker with abrasive cleaner. Use a damp cloth or sponge with water and mild dish detergent. Do not submerge any part of cooker in water. Wash only inner pot and lid.
3. To clean the heating plate and thermo-control plate, use steel wool to polish or remove any residue. Then wipe with a damp cloth. Allow to dry completely before re-using. You must keep the heating plate and thermo-control plate free from any foreign objects, otherwise the cooker will not operate properly.
4. Improper cleaning of cooker may cause unpleasant odors.
5. Any residue to the vinegar or salt may cause pan to corrode.

HOW TO USE

1. Using the measuring cup provided in the package, measure and add rice to the inner pot.

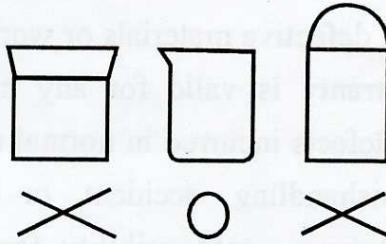

2. By measuring cup, add amount to water to the rice inside the inner pot according to the following standard:

Cups of Raw Rice

15 cups

14 cups

12 cups

10 cups

8 cups

6 cups

4 cups

2 cups

Water add to the line on pot

15 – 15 1/2 cups

14 – 14 1/2 cups

12 – 12 1/2 cups

11 – 11 1/2 cups

9 – 9 1/2 cups

7 – 7 1/2 cups

5 – 5 1/2 cups

3 – 3 1/2 cups

3. Set inner pot in cooker. Place rice and water in inner pot. Close the lid firmly. Turn pan gently to right and left. Close the cover firmly.
4. Plug in power cord. Do not plug in until ready to cook. Otherwise, rice may be spoiled. If pot is not in cooker, cooking will not begin.
5. Press switch. "cook" indicator tells you cooking has started.
6. When rice is done, the switch will pop up. After the switch pops up, leave covered for at least 15 minutes to steam rice.
7. Unplug after each use. Grasp the plug, not the cord.
8. When you stew, the water level should not more than 70% of the volume.
9. Do not attach the ventilating hole for fear scaling.

- **ATTENTION:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in the way.